 
 
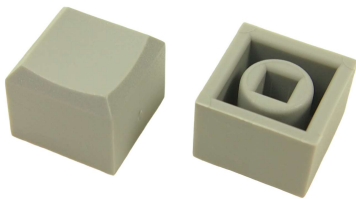 


CLIFF

 
PUSHBUTTON KNOB CS12

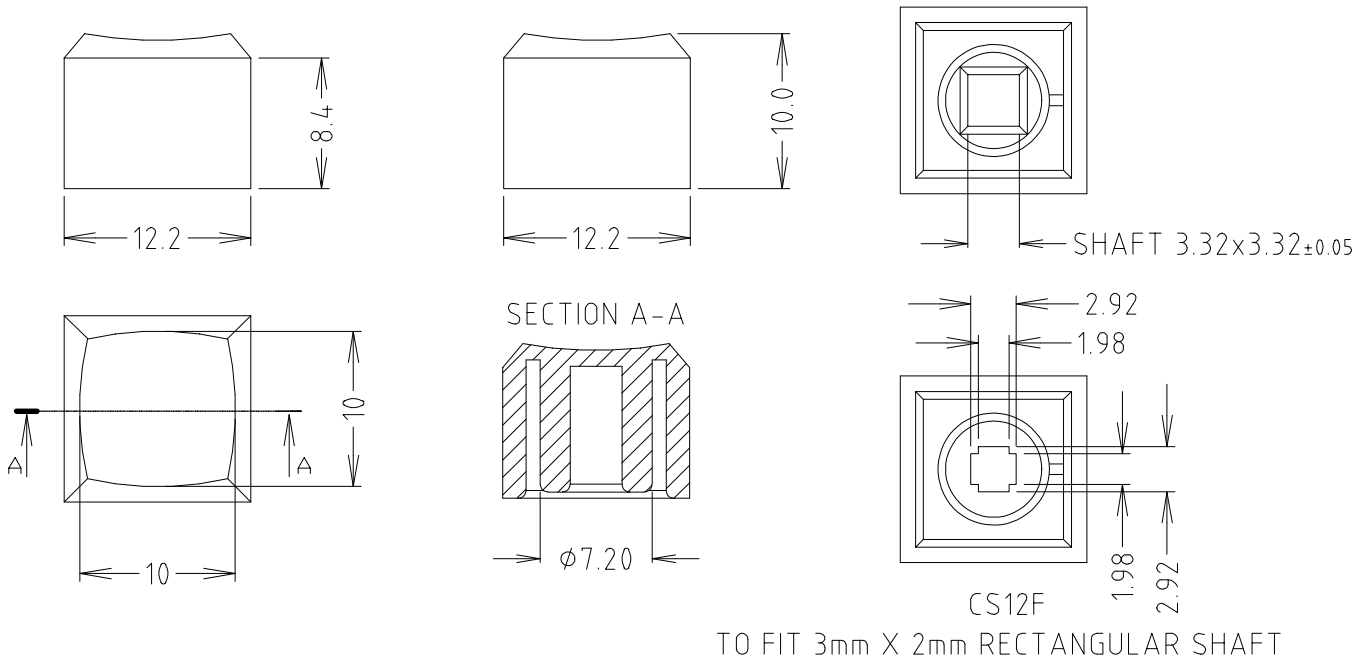


Part No. **CP3427**
CS12 PUSHBUTTON KNOB GREY

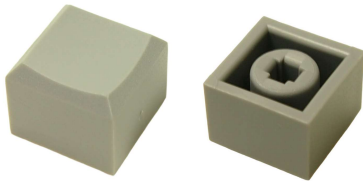

Part No. **CP3428**
CS12F PUSHBUTTON KNOB GREY

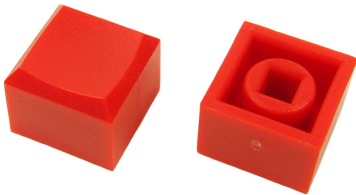

 Part No. **CP3431**
CS12 PUSHBUTTON KNOB RED

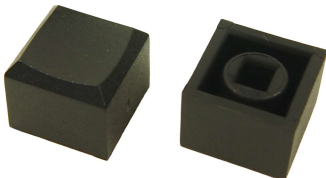

Part No. **CP3433**
CS12 PUSHBUTTON KNOB BLACK